

## Product Data Sheet

**DIAION™ SK1B**

DIAION™ SK1B is a gel type strongly acidic cation exchange resin. It has standard cross-linkages and excellent properties. A wide range of applications, especially in a field of manufacturing and processing pure water, is recommended.

**Product**

Grade Name	DIAION™ SK1B	
Type	Strong Acid Cation	
Matrix	Styrene-DVB, Gel	
Functional Group	Sulfonic acid	
Ionic Form	Na <sup>+</sup>	

**Specification**

Whole Bead Count	-	90 min.
Salt Splitting Capacity	meq/mL	2.0 min.
Water Content	%	43 - 50
Particle Size Distribution on 1180 μm	%	5 max.
Particle Size Distribution thr. 300 μm	%	1 max.
Effective Size	mm	0.40 min.
Uniformity Coefficient	-	1.6 max.

**Typical Properties**


Shipping Density	g/L	840
Mean Particle Size	μm	750
Particle Density	g/mL	1.28
Total Swelling (Na <sup>+</sup> to H <sup>+</sup> )	%	9

**Recommended Operating Conditions**


Maximum Operating Temperature	°C	120
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 40
Regenerant		HCl H <sub>2</sub> SO <sub>4</sub>
Regenerant Concentration	%	HCl 4 - 10 H <sub>2</sub> SO <sub>4</sub> 1 - 4
Regenerant Level	g/L	30 - 150
Regenerant Flow Rate	m/h	2 - 10
Total Rinse Requirement	BV	2 - 10

## Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ SK1B resin in normal down flow operation is shown in the graphs below.

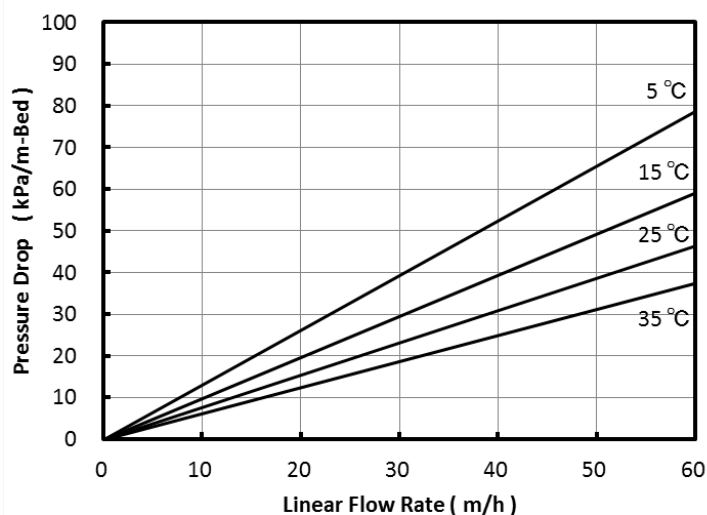


**Fig. 1 Pressure Drop of SK1B**

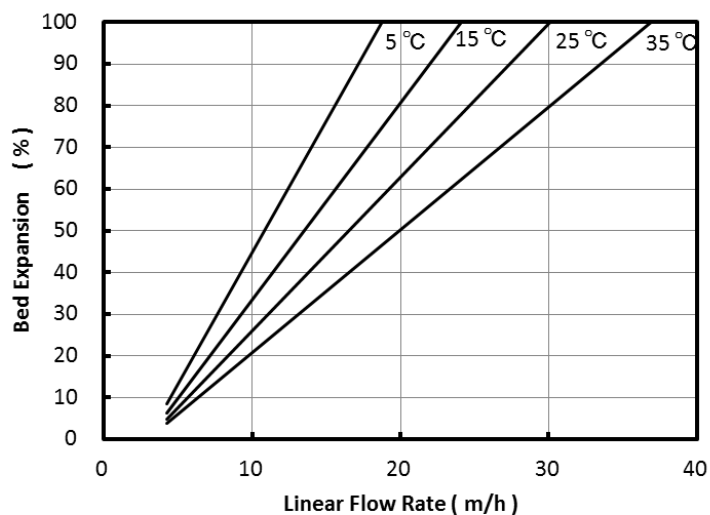

**Fig. 2 Bed Expansion of SK1B**

## Operational Capacity Data

---

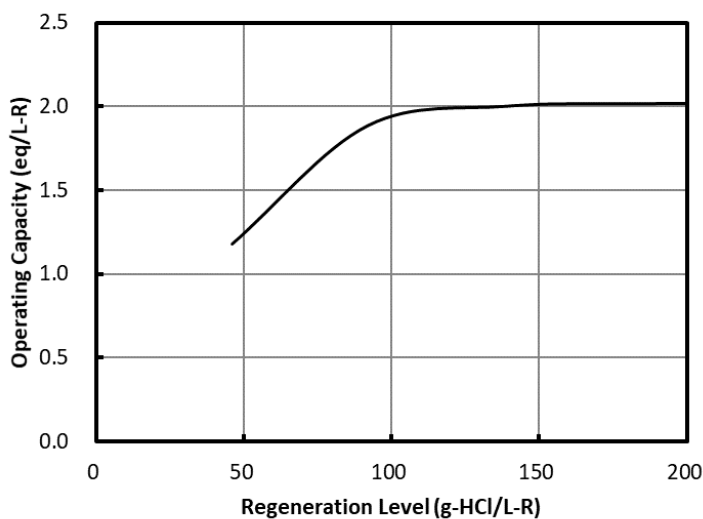

**Fig. 3 Operational Capacity Data of SK1B**  
Regenerant : 4 % HCl

## Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.