

## Product Data Sheet

**DIAION™ UBA120P**

DIAION™ UBA120P is an anion exchange resin with a uniform particle size. It has a standard cross-linkages and anti-clumping characteristics and excellent properties. A wide range of applications, especially in a field of manufacturing and processing pure water in mixed bed, is recommended.

**Product**

Grade Name	DIAION™ UBA120P	
Type	Strong Base Anion	
Matrix	Styrene-DVB, Gel	
Functional Group	Type I (trimethyl ammonium groups)	
Ionic Form	Cl <sup>-</sup>	

**Specification**

Whole Bead Count	-	95 min.
Salt Splitting Capacity	meq/mL	1.3 min.
Water Content	%	49 - 55
Mean Particle Size	μm	575 ± 50
Uniformity Coefficient	-	1.10 max.

**Typical Properties**


Shipping Density	g/L	660
Particle Density	g/mL	1.08
Total Swelling (Cl <sup>-</sup> to OH <sup>-</sup> )	%	24

**Recommended Operating Conditions**


Maximum Operating Temperature	°C	80 (Cl <sup>-</sup> ) 60 (OH <sup>-</sup> )
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 60
Regenerant		NaOH
Regenerant Concentration	%	NaOH 2 - 8
Regenerant Level	g/L	50 - 200
Regenerant Flow Rate	m/h	2 - 8
Total Rinse Requirement	BV	2 - 10

### Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ UBA120P resin in normal down flow operation is shown in the graphs below.

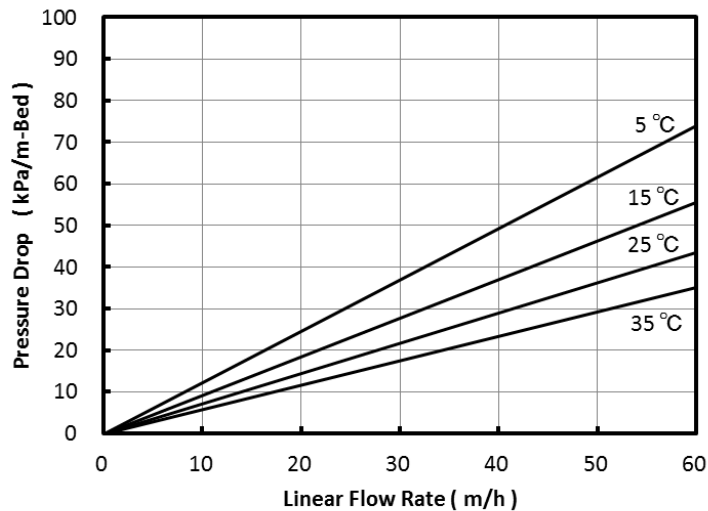

**Fig. 1 Pressure Drop of UBA120P**

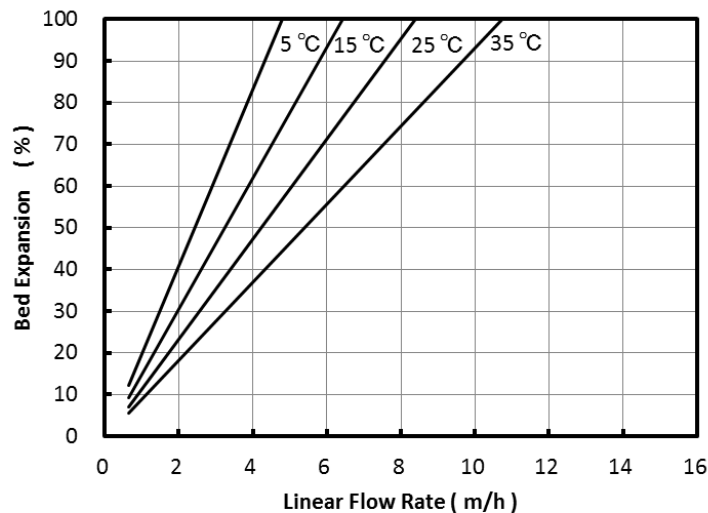

**Fig. 2 Bed Expansion of UBA120P**

### Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.