

Product Data Sheet

Relite™ JA310C

Relite™ JA310C is a highly porous type weakly basic anion exchange resin. It has tertiary amine functionality with high regeneration efficiency and low leachable properties. A wide range of applications, especially in a field of manufacturing highly purified water and pretreatment of UPW for electronic industries, is recommended.

Product

Grade Name	Relite™ JA310C	
Type	Weak Base Anion	
Matrix	Styrene-DVB, Highly Porous	
Functional Group	Tertiary Amine	
Ionic Form	Free Base	

Specification

Whole Bead Count	-	90 min.
Total Exchange Capacity	meq/mL	1.45 min.
Water Content	%	51 - 61
Particle Size Distribution on 1180 μm	%	5 max.
Particle Size Distribution thr. 300 μm	%	1 max.
Effective Size	mm	0.45 min.
Uniformity Coefficient	-	1.6 max.

Typical Properties

Shipping Density	g/L	705
Mean Particle Size	μm	780
ΔTOC	ppb	300 max.
Particle Density	g/mL	1.05
Total Swelling (FB to Cl ⁻)	%	17

Recommended Operating Conditions

Maximum Operating Temperature	°C	100
Operating pH Range		0 - 9
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 40
Regenerant		NaOH
Regenerant Concentration	%	NaOH 1 - 4
Regenerant Level	% of ionic load	120
Regenerant Flow Rate	m/h	2 - 6
Total Rinse Requirement	BV	5 - 10

Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of Relite™ JA310C resin in normal down flow operation is shown in the graphs below.

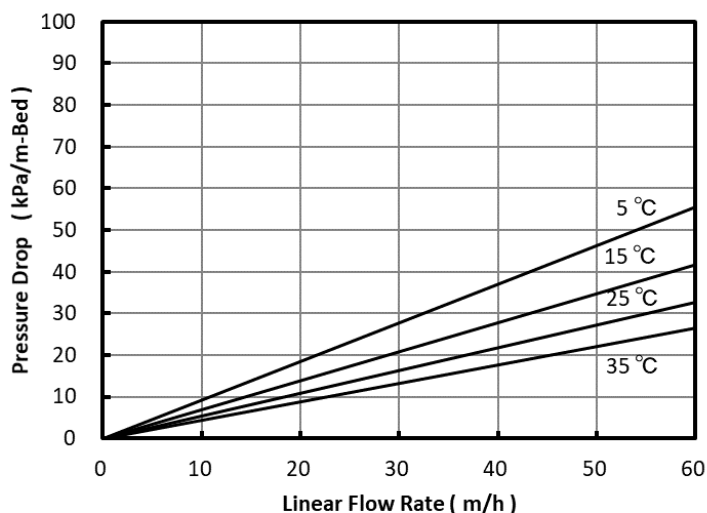


Fig. 1 Pressure Drop of JA310C

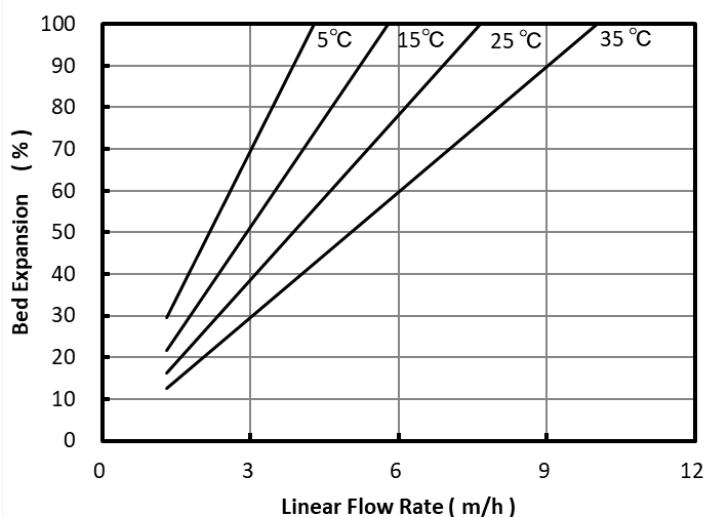


Fig. 2 Bed Expansion of JA310C

Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.