

## Product Data Sheet

## DIAION™ PK220

DIAION™ PK220 is a porous type strongly acidic cation exchange resin. It has 10% cross-linkages and excellent properties. A wide range of applications, especially in a field of manufacturing and processing pure water, is recommended.

## Product

Grade Name	DIAION™ PK220	
Type	Strong Acid Cation	
Matrix	Styrene-DVB, Porous	
Functional Group	Sulfonic Acid	
Ionic Form	Na <sup>+</sup>	

## Specification

Whole Bead Count	-	95 min.
Salt Splitting Capacity	meq/mL	1.9 min.
Water Content	%	41 - 47
Particle Size Distribution on 1180 μm	%	5 max.
Particle Size Distribution thr. 300 μm	%	1 max.
Effective Size	mm	0.40 min.
Uniformity Coefficient	-	1.6 max.

## Typical Properties


Shipping Density	g/L	800
Mean Particle Size	μm	720
Particle Density	g/mL	1.29
Total Swelling (Na <sup>+</sup> to H <sup>+</sup> )	%	8

## Recommended Operating Conditions


Maximum Operating Temperature	°C	120
Operating pH Range		0 - 14
Minimum Bed Depth	mm	800
Service Flow Rate	m/h	10 - 60
Regenerant		HCl H <sub>2</sub> SO <sub>4</sub>
Regenerant Concentration	%	HCl 4 - 10 H <sub>2</sub> SO <sub>4</sub> 1 - 4
Regenerant Level	g/L	50 - 200
Regenerant Flow Rate	m/h	2 - 10
Total Rinse Requirement	BV	2 - 10

### Hydraulic Characteristics

The approximate pressure drop at various temperatures and flow rates for each meter of bed depth of DIAION™ PK220 resin in normal down flow operation is shown in the graphs below.

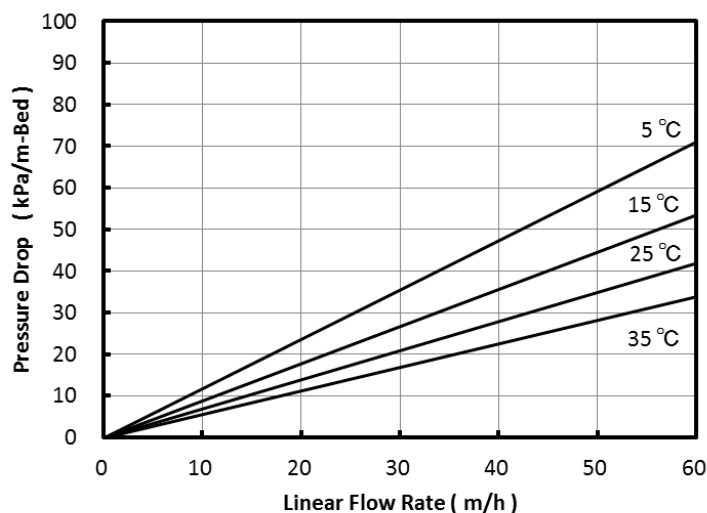

**Fig. 1 Pressure Drop of PK220**

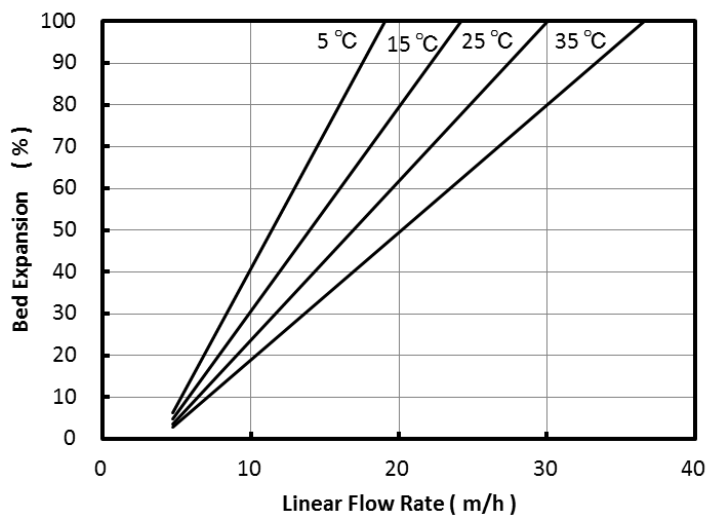

**Fig. 2 Bed Expansion of PK220**

### Notice

This information are given in good faith but without warranty, and this also applies where proprietary rights of third parties are involved. The application, use and processing of our products are beyond our control and therefore your own responsibility.